

High-quality digital indicator for panel mounting

Model DI35-M, with multi-function input

Model DI35-D, with two inputs for standard signals

WIKA data sheet AC 80.03

Applications

- Machine building and plant construction
- Test benches
- Level measurement
- General industrial applications

Special features

- Multi-function input (29 calibrated input configurations) or double input (0/4 ... 20 mA, DC 0 ... 10 V) with calculation function
- Accuracy ± 0.01 ... 0.1% of the span ± 1 digit (depends on the input configuration)
- Transmitter power supply, MIN/MAX memory, HOLD/TARE/Totaliser function
- Linearisation with up to 30 programmable points possible
- Up to four freely programmable switch contacts (optional)

Description

The model DI35 digital indicator is a multi-function and very accurate instrument for a wide variety of measuring tasks. It is available in two different versions:

■ DI35-M

The version has a multi-function input with 29 different calibrated input configurations that can be selected via terminal connections and the input signal in the instrument configuration. The display can permanently show the MIN or MAX value. Moreover, a totaliser function is integrated.

■ DI35-D

The version is equipped with two inputs for standard signals (0/4...20 mA and DC 0...10 V) that can be used in any combination. The display can show one of the two input signals or a calculated value. Calculations can be made by means of the four basic arithmetic operations (+ - * /) and an additional constant multiplier.



High-quality digital indicator for panel mounting
Model DI35

In addition, both versions offer the possibility to calibrate sensors and linearise using up to 30 points. This allows further adaptation of the displayed values to different sensor signals and application requirements.

The standard features are completed by a transmitter power supply, a HOLD function and a TARE function for the correction of offset shifts and sensor drifts. The sampling rate and display time can be configured and the display can be dimmed. Unauthorised alteration of the set instrument parameters can be prevented via different user levels, in conjunction with a freely selectable access code.

Optionally available are up to four freely programmable switch contacts, an analogue output signal and a serial interface.

Display

Principle

7-segment LED, red, 5-digit, brightness adjustable in 10 gradations

Character size

14 mm

Indication range

-9999 ... 99999

Display rate

0.1 ... 10.0 seconds

Memory

EEPROM (parameter memory), data preservation > 100 years

Input

Number and type

Selectable versions
1 x multi-function input (for model DI35-M)
2 x input for standard signals (for model DI35-D)

Input signal

- DI35-M: see tables "Accuracy/measuring errors of the input signals", page 4 + 5
- DI35-D: 0 ... 20 mA, $R_I \approx 50 \Omega$
4 ... 20 mA, $R_I \approx 50 \Omega$
DC 0 ... 10 V, $R_I \approx 150 \text{ k}\Omega$

Input configuration

Selectable via terminal connections and menu-driven programming

Accuracy

see tables "Accuracy/measuring errors of the input signals", page 4 + 5

Temperature error

50 ppm/K, at ambient temperature $T_U < 20 \text{ }^\circ\text{C}$ or $T_U > 40 \text{ }^\circ\text{C}$

Measuring principle

Sigma/delta

Resolution

24 bit (with 1 second measuring time)

Measuring time

- DI35-M: 0.02 ... 10.0 s
- DI35-D: 0.02 ... 10.0 s, for single-channel measurement
0.04 ... 10.0 s, for two-channel measurement

Transmitter power supply

DC 24 V, max. 50 mA, galvanically isolated incl. one digital input

Analogue output (option)

Number and type

1 analogue output (galvanically isolated)

Output signal

4 ... 20 mA (12-bit), load $\leq 500 \Omega$
0 ... 20 mA (12-bit), load $\leq 500 \Omega$
DC 0 ... 10 V (12-bit), load $\geq 100 \text{ k}\Omega$

Switchable via programming or via DIP switches on rear of instrument.

Error

0.1 % in the range 20 ... 40 °C
50 ppm/K outside temperature error

Internal resistance

100 Ω (with measuring input DC 0 ... 10 V)

Switching output (option)

Number and type

2 or 4 switch contacts (relays), freely programmable

Load

AC 230 V, 5 A (resistive load)
DC 30 V, 5 A (resistive load)

Number of switching operations

$0.5 \cdot 10^5$ at max. contact load
 $5 \cdot 10^6$ mechanical
Isolation in accordance with DIN EN 50178
Parameters in accordance with DIN EN 60255

Voltage supply

Power supply

Selectable versions	
Standard	AC 100 ... 240 V, 50/60 Hz
Option	DC 10...40 V, AC 18...30 V, 50/60 Hz

Power supply galvanically isolated

Power consumption

max. 15 VA

Electrical connection

- DI35-M: Removable plug-in terminal
Wire cross-section up to 2.5 mm²
- DI35-D: Removable plug-in terminal
Wire cross-section up to 2.5 mm²

Communication (option)

Interface

Selectable versions	
Option 1	RS-232 (not galvanically isolated)
Option 2	RS-232 (galvanically isolated)
Option 3	RS-485 (not galvanically isolated, only for point-to-point connection)
Option 4	RS-485 (galvanically isolated, only for point-to-point connection)

Protocol

manufacturer-specific ASCII

Baud rate

9,600 baud, no parity, 8 data bits, 1 stop bit

Lead length

RS-232: max. 3 m

RS-485: max. 1,000 m

Case

Material

Glass-fibre reinforced polycarbonate, black

Ingress protection

Front: IP 65, rear: IP 00 (per IEC 60529 / EN 60529)

Dimensions

see "Dimensions in mm", page 8

Recommended mounting grid

120 mm horizontal, 96 mm vertical

Weight

approx. 450 g

Mounting

sliding fasteners, fixed via screws, for panel thicknesses up to 50 mm

Table-top case

The table-top case is available as an option for the model DI35-D.

Input signal

Only available with 4 ... 20 mA

Switching outputs

Only available with 2 switching outputs

Material

- Front, rear, side plates: aluminium, black, powder-coated
- Cover, base plate: hard paper, black (Pertinax)

Ingress protection

IP 40

Dimensions

see "Dimensions in mm", page 8

Weight

approx. 1.6 kg

Operating conditions

Permissible ambient temperatures

Operation: 0 ... 60 °C

Storage: -20 ... +80 °C

Humidity

0 ... 75 % r. h. annual mean, without condensation

Accuracy/measuring errors of the input signals

Inputs with factory calibration

Input signals	Measuring span	Measuring error in % of the Minimum measuring time measuring span ¹⁾	Minimum measuring time		
			DI35-M	DI35-D Single-channel measurement	Dual-channel measurement
Current signals	0 ... 20 mA	±0.02 % ±1 digit	0.02 s	0.02 s	0.04 s
	4 ... 20 mA	±0.02 % ±1 digit	0.02 s	0.02 s	0.04 s
Voltage signals	DC 0 ... 18 mV	±0.06 % ±1 digit	0.02 s	-	-
	DC 0 ... 35 mV	±0.06 % ±1 digit	0.02 s	-	-
	DC 0 ... 75 mV	±0.04 % ±1 digit	0.02 s	-	-
	DC 0 ... 150 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC 0 ... 300 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC 0 ... 600 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC 0 ... 1,250 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC 0 ... 2,500 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC 0 ... 5 V	±0.02 % ±1 digit	0.02 s	-	-
	DC 0 ... 10 V	±0.01 % ±1 digit	0.02 s	0.02 s	0.04 s
Thermocouples					
Type B, PtRh-PtRh	-100 ... +1,810 °C	±0.10 % ±1 digit	0.04 s	-	-
Type E, NiCr-CuNi	-260 ... +1,000 °C	±0.06 % ±1 digit	0.04 s	-	-
Type J, Fe-CuNi	-210 ... +1,200 °C	±0.05 % ±1 digit	0.04 s	-	-
Type K, NiCr-Ni	-250 ... +1,271 °C	±0.05 % ±1 digit	0.04 s	-	-
Type L, Fe-CuNi	-200 ... +900 °C	±0.06 % ±1 digit	0.04 s	-	-
Type N, NiCrSi-NiSi	-250 ... +1,300 °C	±0.06 % ±1 digit	0.04 s	-	-
Type R, PtRh-Pt	0 ... 1,760 °C	±0.07 % ±1 digit	0.04 s	-	-
Type S, PtRh-Pt	0 ... 1,760 °C	±0.06 % ±1 digit	0.04 s	-	-
Type T, Cu-CuNi	-240 ... +400 °C	±0.07 % ±1 digit	0.04 s	-	-
Resistance thermometer ²⁾					
Pt100 (2-/4-wire)	-200 ... +850 °C	±0.04 % ±1 digit	0.04 s	-	-
Pt100 (3-wire)	-200 ... +850 °C	±0.04 % ±1 digit	0.06 s	-	-
Pt200 (2-/4-wire)	-200 ... +850 °C	±0.04 % ±1 digit	0.04 s	-	-
Pt200 (3-wire)	-200 ... +850 °C	±0.04 % ±1 digit	0.06 s	-	-
Pt500 (2-/4-wire)	-200 ... +850 °C	±0.04 % ±1 digit	0.04 s	-	-
Pt500 (3-wire)	-200 ... +850 °C	±0.04 % ±1 digit	0.06 s	-	-
Pt1000 (2-/4-wire)	-200 ... +850 °C	±0.04 % ±1 digit	0.06 s	-	-
Pt1000 (3-wire)	-200 ... +850 °C	±0.04 % ±1 digit	0.04 s	-	-

1) The indication of the measuring error applies to ambient temperatures 20 ... 40 °C and the measuring time of 1 second.

2) The indications for Pt100 3-/4-wire apply at a max. lead resistance of 10 Ω.


Inputs for sensor calibration

Input signals	Measuring span	Measuring error in % of the measuring span ¹⁾	Minimum measuring time		
			D135-M	D135-D	
				Single-channel measurement	Dual-channel measurement
Current signals	0 ... 2 mA	±0.02 % ±1 digit	0.02 s	-	-
	0 ... 5 mA	±0.02 % ±1 digit	0.02 s	-	-
	0 ... 20 mA	±0.02 % ±1 digit	0.02 s	0.02 s	0.04 s
	4 ... 20 mA	±0.02 % ±1 digit	0.02 s	0.02 s	0.04 s
Voltage signals	DC -18 ... +18 mV	±0.06 % ±1 digit	0.02 s	-	-
	DC -35 ... +35 mV	±0.06 % ±1 digit	0.02 s	-	-
	DC -75 ... +75 mV	±0.04 % ±1 digit	0.02 s	-	-
	DC -150 ... +150 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC -300 ... +300 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC -500 ... +600 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC -500 ... +1,250 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC -500 ... +2,500 mV	±0.03 % ±1 digit	0.02 s	-	-
	DC -1 ... +5 V	±0.02 % ±1 digit	0.02 s	-	-
	DC -1 ... +10 V	±0.01 % ±1 digit	0.02 s	0.02 s	0.04 s
Resistance (2-, 3-, or 4-wire)					
	0 Ω ... 100 Ω	±0.04 % ±1 digit	0.04 s	-	-
	0 Ω ... 1 kΩ	±0.04 % ±1 digit	0.04 s	-	-
	0 Ω ... 10 kΩ	±0.04 % ±1 digit	0.04 s	-	-

1) The indication of the measuring error applies to ambient temperatures 20 ... 40 °C and the measuring time of 1 second.

Terminal configuration


Terminal strip at the top

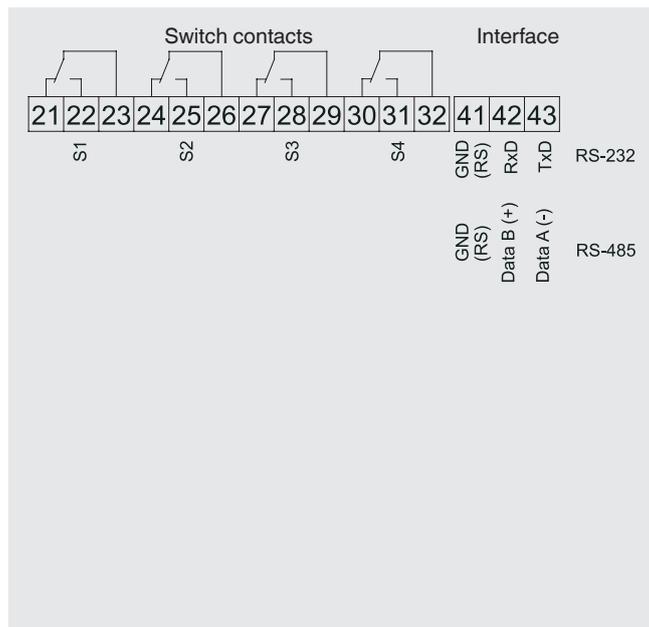

Terminal	Case labelling	Meaning
21		Normally closed
22	S1	{Switch contact 1}
23		Normally open
24		COM
25	S2	{Switch contact 2}
26		Normally closed
27		Normally open
28	S3	{Switch contact 3}
29		COM
30		Normally closed
31	S4	{Switch contact 4}
32		Normally open
		COM
41	GND	{Serial interface RS232}
		{Serial interface RS485}
42	RxD	{Serial interface RS232}
	Data B(+)	{Serial interface RS485}
43	TxD	{Serial interface RS232}
	Data A(-)	{Serial interface RS485}

{ } Items in curved brackets are optional extras for an additional price.


Terminal strip below for DI35-M

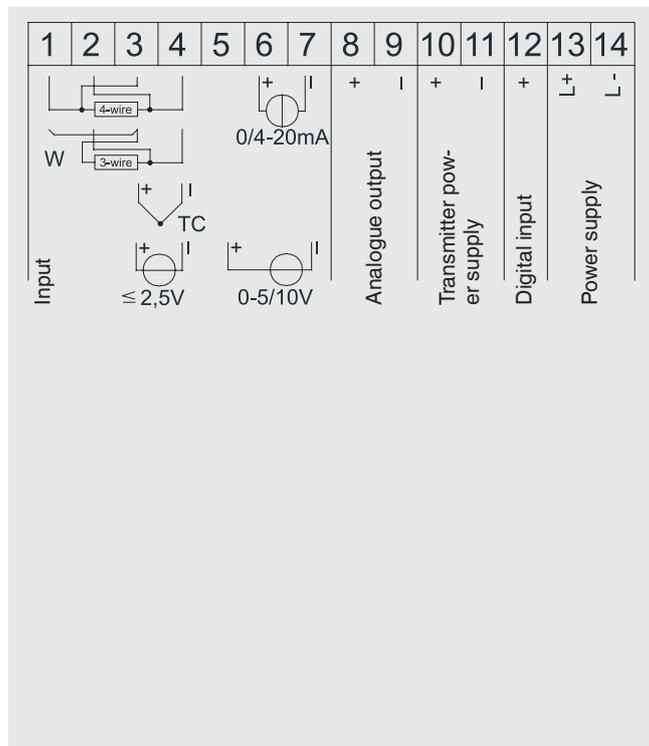

Terminal	Case labelling	Meaning
1		Measuring input Resistance thermometer
2		Measuring input Resistance thermometer
3		Measuring input Resistance thermometer
	+	Voltage measuring signal ≤ 2.5 V
	+	Thermocouple measuring signal
4		Measuring input Resistance thermometer
	-	Voltage measuring signal ≤ 2.5 V
	-	Thermocouple measuring signal
5	+	Voltage measuring signal
6	+	Current measuring signal
7	-	Voltage measuring signal
	-	Current measuring signal
8	+	{Analogue output}
9	-	
10	+	{Transmitter power supply}
11	-	
12	+	Digital input
13	L+	Power supply
14	L-	

{ } Items in curved brackets are optional extras for an additional price.


Terminal strip below for DI35-D

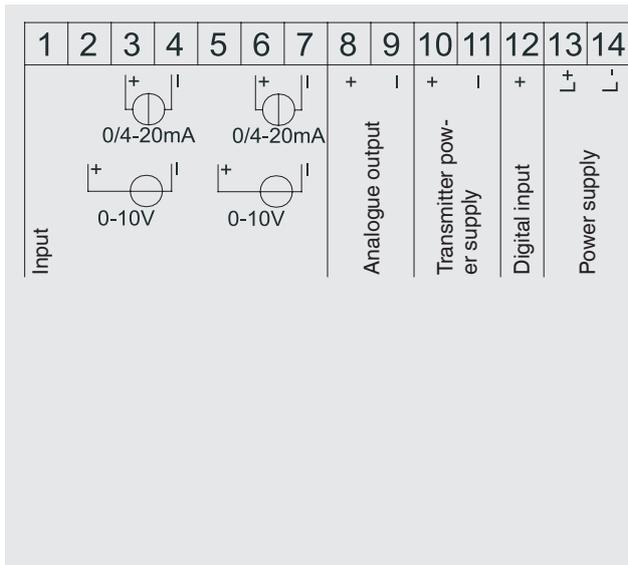

Terminal	Case labelling	Meaning
1		Not connected
2	+	Voltage measuring signal
3	+	Voltage measuring signal
4	-	Voltage measuring signal
5	-	Current measuring signal
6	+	Voltage measuring signal
7	+	Current measuring signal
8		{Analogue output}
9		
10	+	{Transmitter power supply}
11	-	
12	+	Digital input
13	L+	Power supply
14	L-	

{ } Items in curved brackets are optional extras for an additional price.

Pin assignment for DI35-D in table-top case

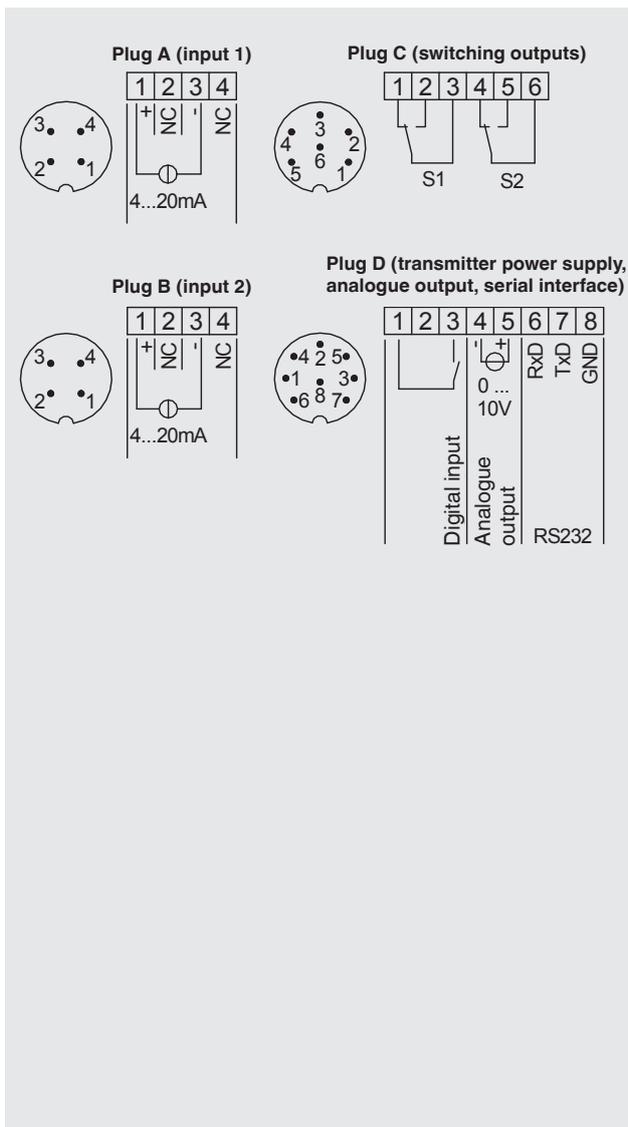

Plug A (input 1)		
Terminal	Case labelling	Meaning
1	+	Current measuring signal
2	NC	Not connected
3	-	Current measuring signal
4	NC	Not connected

Plug B (input 2)		
Terminal	Case labelling	Meaning
1	+	Current measuring signal
2	NC	Not connected
3	-	Current measuring signal
4	NC	Not connected

Plug C (switching outputs)		
Terminal	Case labelling	Meaning
1		Normally closed
2	S1	Normally open
3		COM
4		Normally closed
5	S2	Normally open
6		COM

only with digital indicator with switch points

Plug D (transmitter power supply, analogue output, serial interface)		
Terminal	Case labelling	Meaning
1		
2		Digital input
3		
4	-	Analogue output
5	+	
6	RxD	
7	TxD	RS-232 interface
8	GND	

only with digital indicators with analogue output or interface

Dimensions in mm

Digital indicator



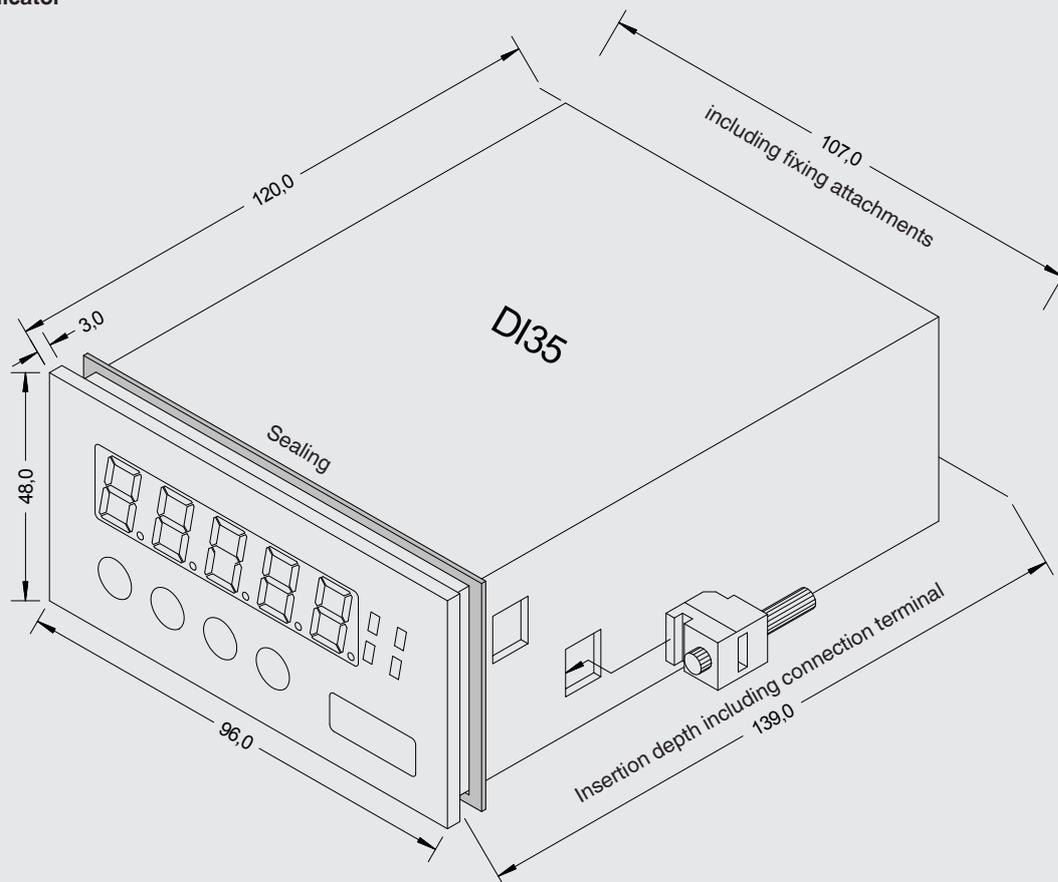



Table-top case

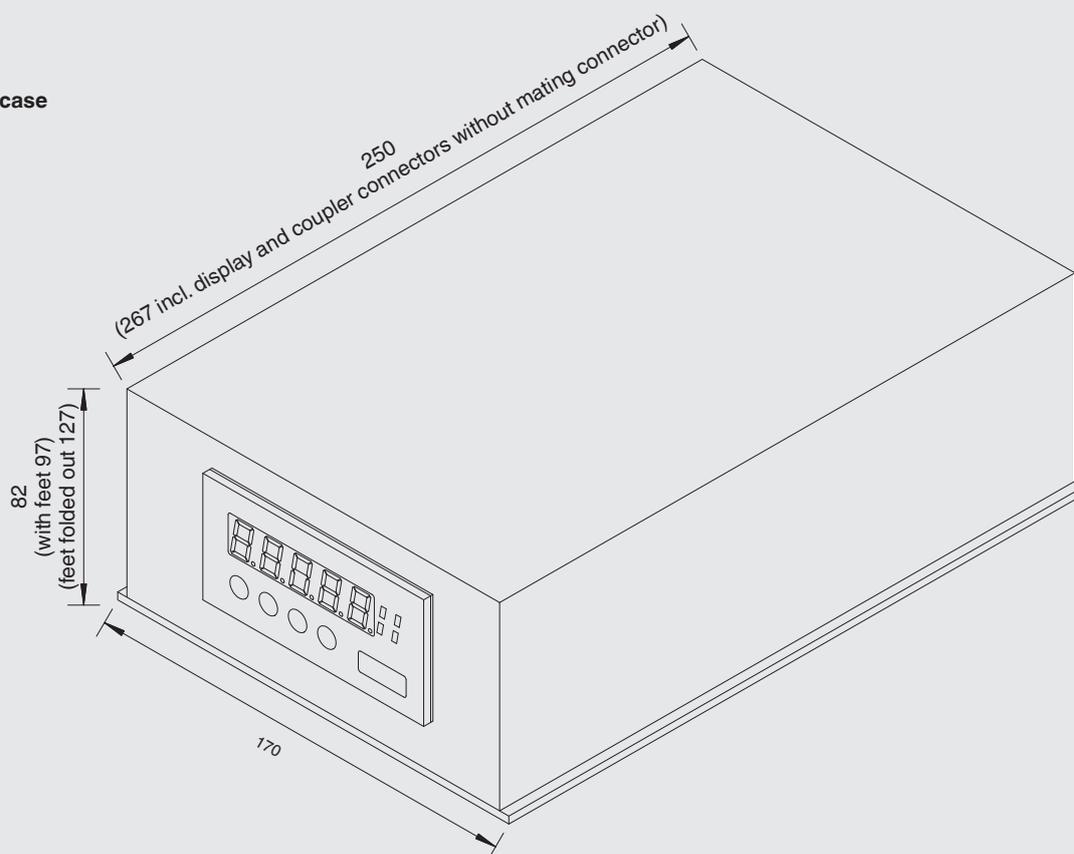

Panel cutout in mm

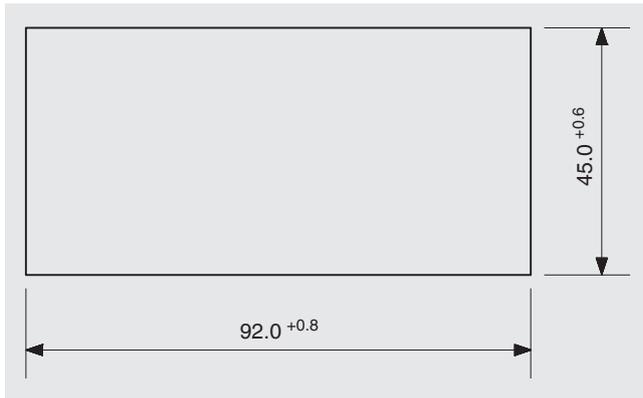

Display and control element

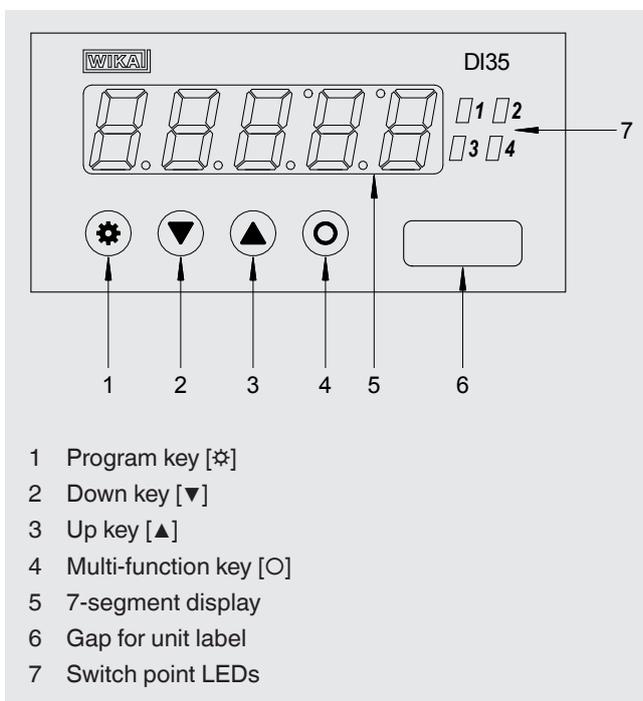

CE conformity

EMC directive

2004/108/EC, interference emission and interference immunity in accordance with EN 61326-1, emission (group 1, class B) und interference immunity (industrial application)

Low voltage directive

2006/95/EC, EN 61010-1

Scope of delivery

- Digital indicator model DI35
- Sealing
- Mounting screws
- Operating instructions
- Punched paper with unit labels for selection

Ordering information

Model / Input / Switching outputs / Power supply / Transmitter power supply / Analogue output signal / Interface / Ingress protection / Instrument configuration

© 2003 WIKA Alexander Wiegand SE & Co. KG, all rights reserved.
The specifications given in this document represent the state of engineering at the time of publishing.
We reserve the right to make modifications to the specifications and materials.

